
Smart Dietary Scale KS 210 connect

medisana

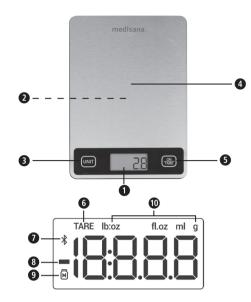

GB Unit and controls

- Display
- 2 Battery Compartment (on underside)
- Unit selection
- Weighting area
- 6 ON/OFF and TARE button
- 6 Tare
- Bluetooth
- Minus
- Milk Unit (lb:oz / fl.oz / ml / g)

Legend:



This instruction manual belongs to this device. The instruction manual includes information on the initial start-up and handling. Read this instruction manual completely. Failure to follow these instructions may result in serious injury or damage to the equipment.



WARNING!

These warnings must be followed to prevent possible injury to the user.





Manufacturer





Read the instruction manual carefully before using this device, especially the safety instructions, and keep the instruction manual for future use. Should you give this device to another person, it is vital that you also pass on these instructions for use.



GB Safety instructions

- · Use the device only according to its intended purpose as specified in the instruction manual. The warranty will be invalidated if the device is used for purposes other than those for which it is intended.
- The scale has been manufactured for domestic use. It is not suitable for commercial use in hospitals or other medical institutions
- · Do not use the device if it is not working correctly, if it has been dropped or has fallen into water or has been damaged.
- The scales have a measuring range up to 5 kg. Do not overload the 2. Switch the scale on by touching the ON/OFF button §
- · Place the scales on a firm, level base. Soft, uneven surfaces are unsuitable for the measuring process and lead to incorrect results.
- Do not use the scale in a location where extremely high temperatures or humidity may occur.
- · Keep the scale away from water.
- Handle the scale with care. The scale must not be subjected to impacts or vibration. Do not drop the scale.
- Do not attempt to dismantle the scale, otherwise the warranty will be invalidated. This unit contains no user-maintainable or userreplaceable parts.
- Do not attempt to repair the device yourself in the event of a malfunction since this will invalidate the warranty. Repairs should only be carried out by authorised service centres.


Battery safety instructions

- · Do not disassemble batteries!
- · Remove discharged batteries from the device immediately! Increased risk of leakage!
- Avoid contact with skin, eyes and mucous membranes! If battery acid comes in contact with any of this parts, rinse the affected area with copious amounts of fresh water and seek medical attention immediately!
- · If a battery has been swallowed seek medical attention immediately!
- Insert the batteries correctly, observing the polarity!
- · Always keep the battery compartment well closed!
- · Remove the batteries from the device if it is not going to be used for an extended period!
- · Keep the batteries out of the reach of children!
- Do not re-charge the batteries! There is a risk of explosion!
- Do not short-circuit the device! There is a risk of explosion!
- Do not throw into a fire! There is a risk of explosion!
- Store unused batteries in the packaging and not near metal objects
 Error messages to avoid a short circuit!

Scope of delivery

First, check whether the device is complete and is not damaged. If in doubt, do not operate the device and contact your service center. The scope of delivery includes:

- 1 medisana Smart Dietary Scale KS 210 connect
- 1 Instruction manual
- 1 Quick Start Guide

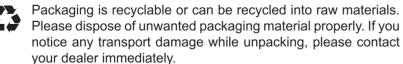

WARNING

• Make sure that children do not play with the packaging foils. Risk of suffocation!

Insert/change batteries

Before putting your digital scale into operation, insert the two 1.5 V batteries (type AAA) included in the device. Open the battery compartment 2 on the underside of the device and insert the batteries. Pay attention to the polarity (illustration in the battery compartment 2). Replace the battery compartment cover 2 and push it in so that it clicks into place. Change the 3. Added food will be saved at the "Diary". You could also add the food batteries if the battery change symbol "Lo" appears on the display 1 or if nothing is shown on the display after the unit has been operated.

Initialise scale

- 1. Make sure that the scale is on firm and level ground.
- 3. Switch off the scale by touching and holding the ON/OFF button 3 for a few seconds.
- 4. After approximate 2 minutes of non-usage, the device will automatically switch off.

Simple weighing

- 1. Touch the ON/OFF button 6 and wait, until the display shows "0g".
- 2. Put the item(s) to weigh on the weighing surface 4. The weight will be shown in the display 1.

- 1. If you want to weigh items in a container, the container should be placed on the weighing surface 4 and delete the weight of the container by touching the "TARE" button 3. The "TARE" indicator 3 will be on and the display will show "0".
- 2. Now add the item to weigh. The weight will be shown on the display 1. Touch the "TARE" button **3**. The display **0** will again show "0". Now you may add the next item to weigh. You may repeat this procedure several times as desired.
- 3. Touch the ON/OFF button 6 once before all objects on the scale are removed, and the weight of all items will be displayed on the LCD Weight
- 4. After the measurement is completed, remove all items on the scale. Touch the ON/OFF button 5 to reset to zero if the value displayed is not zero.

Change the unit of weight

Press the Unit selection button 3 to switch units between g/ml/ml (Milk) fl.oz/lb:oz.

When only the "ml" or "fl.oz" indicator 10 light is on, it means the device is in the function of weighing water; when "ml" and the "milk" indicator 9 light up at the same, it means the device is in the function of weighing milk volume.

ERR = The scale is overloaded.

Lo = The battery is week and need to be replaced.

0 = Please put items on the scale.

- = When any items are removed after taring. The minus indicator (8) will be on and the weight of removed items will be displayed.

TARE = The scale are tared.

Bluetooth = Bluetooth connected successfully.

Connect with the medisana Healthy Living App

Download the "medisana Healthy Living" App free from the AppStore or the Google Play Store.



Manage your daily food intake in the App

- 1. Activate Bluetooth on your iOS or Android device. Start the App and tap on the "Weigh" function.
- 2. Place the food on the scale and click "What is on the scale". Choose food and click "Add" to record.
- to your daily diet by inputing the food weight manually.

Cleaning and care

Never use aggressive cleaning agents or stiff brushes. Clean the scale only with a soft, slightly damp cloth. Never use harsh detergents or alco-hol. No water should enter the device. Only use the device again when it is completely dry.

Instructions for disposal



This device must not be disposed of with domestic waste. Metals are reusable or can be recycled into raw materials. Dispose of a device that is no longer needed at a collection point in your town/city so that it can be disposed of in an environmentally friendly way. Please contact your local

authority or retailer with regard to disposal procedures. Remove the battery before you dispose of the device. Do not dispose of spent batteries in domestic waste, rather in special waste or at a battery collection point at your retailer!

Technical specifications

Name and model no. : medisana Smart Dietary Scale

KS 210 connect

: 2 x 1.5V AAA "LR03" alkaline batterv Voltage supply Measuring range : 2 - 5000a

Graduation $: 0.5 g (< 1 kg) / 1 g (\ge 1 kg)$

Dimensions : 220 x 160 x 21 mm

: 0.475 kg : 48909 Article no.

: 40155 88 48909 9 EAN no.

Warranty and repair conditions

In case of warranty please contact your specialist shop or the service centre directly. If you need to return the device, please indicate the defect and enclose a copy the purchase receipt. The following warranty conditions apply:

- 1. All medisana products are guaranteed for one year from the date of purchase. The date of purchase is to be proven in case of warranty by the purchase receipt or invoice.
- 2. Defects due to material or manufacturing defects shall be eliminated free of charge within the warranty period.
- 3. A warranty service does not extend the warranty period for either the equipment or any replacement parts.
- **4.** The following are excluded from the guarantee:
 - a. any damage caused by improper handling, e.g. by nonobservance of the instruction manual
- **b.** Damage due to repair or intervention by the purchaser or unauthorised third parties.
- c. Transport damage that has occurred on the way from the manufacturer to the consumer or when sending it to the service
- 5. Liability for direct or indirect consequential damages caused by the device is also excluded if the damage to the device is recognised as a warranty case.

Unit E&F, 31/F, YHC Tower, 1 Sheung Yuet Road, Kowloon Bay, Kowloon, Hong Kong







