


Device and controls

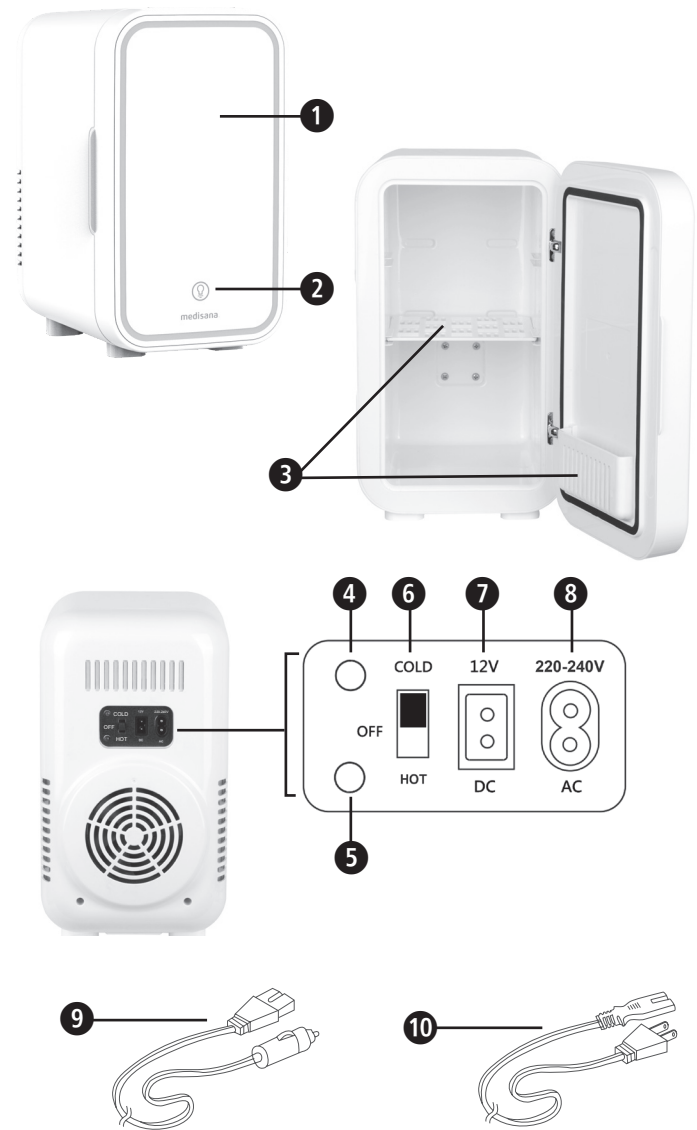

- 1 LED makeup mirror
- 2 LED light button
- 3 Removable shelves
- 4 Cooling indicator (green)
- 5 Heating indicator (red)
- 6 Cold and hot switch
- 7 DC 12V power socket for car
- 8 AC 220-240V power socket for home
- 9 DC power cord (Cigarette lighter plug)
- 10 AC power cord

Explanation of symbols

IMPORTANT!
Non-observance of these instructions can result in serious injury or damage to the device.

WARNING
These warning notes must be observed to prevent any injury to the user.

CAUTION
These notes must be observed to prevent any damage to the device.

NOTE
These notes provide useful additional information on the installation or operation.

LOT LOT number



GB Safety instructions

Read the instruction manual carefully before using this device, especially the safety instructions, and keep the instruction manual for future use. Should you give this device to another person, it is vital that you also pass on these instructions for use.

- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure they do not play with the appliance.
- Ensure children and babies do not play with plastic bags or any packaging materials.
- Never use in a car powered by 24V, or in a home powered by anything other than 220-240V. It will cause malfunction and fire.
- The product should not be transported or loaded with corrosive articles, and should not be wiped with corrosive solvent.
- Do not block the ventilation and heat dissipation port at the back when using at ordinary times.
- This product shall be operated in strict accordance with the instructions. Please do not disassemble the internal parts without permission.
- Under heating mode, the machine can control the temperature in the fridge to about 45–65°C. Please pay attention to the high temperature to avoid burns.
- When switching between hot and cold modes, please ensure the device is set to “OFF” for 15 minutes before switching to the other mode.
- Keep at least 10cm clearance around the sides, back, front and top of the product. Avoid placing or exposing the product in areas prone to rain or near heat sources, such as electric heaters, LPG furnaces, heat pipes, or direct sunlight.
- Do not locate multiple portable socket outlets or portable power supplies at the rear of the appliance.
- Ensure that the appliance does not get wet (water splashes, etc.). Do not use the appliance with wet hands.
- Do not immerse the appliance in water or other liquids, or use it near sinks, baths, or showers.
- If there is water in the fridge, clean regularly to ensure it is dry.
- This product is not a refrigerator, and cannot store frozen fresh meat.

About the power supply

- When positioning the appliance, ensure the supply cord is not trapped or damaged.
- If the power cord is damaged, do not touch it by hand to avoid danger.
- When using the product, pay attention to the correct voltage (the applicable voltage of the product is clearly marked on the product label).
- Position the power supply lead correctly to avoid it being walked on or pinched by items placed on or against it.
- When using the product in the car, be sure to turn on the engine, and if the engine is turned off, unplug the DC power cord.
- Unplug the power cord from the AC outlet or DC cigarette lighter outlet when the product is not in use for a long time.

Before using the unit

- Check the device carefully for damage before each use. Do not operate a defective device.
- Do not use the device if any damage is visible, if it is not working properly, if it has been dropped or if it has become wet. To avoid hazards, send the unit to the service centre for repair.

Scope pf supply

Please check first of all that the device is complete and is not damaged in any way. In case of doubt, do not use it and contact your supplier or your service centre.


The following parts are included:

- 1 **medisana** Beauty Fridge with LED Mirror SF 100
- 2 Removable shelves
- 1 AC power cord
- 1 DC power cord
- 1 Instruction manual

WARNING
Please ensure that the polythene packing is kept away from the reach of children! Risk of suffocation!

Using the device

- Make sure the cold and hot switch 6 at the back is in OFF state, and then insert the plug of the power cord into the socket of the unit.
- **Use of car engine power supply:**
 - After starting the car engine, connect and plug the DC power cord 9 into the DC 12 V power socket 7 of the fridge and the socket of car cigarette lighter.

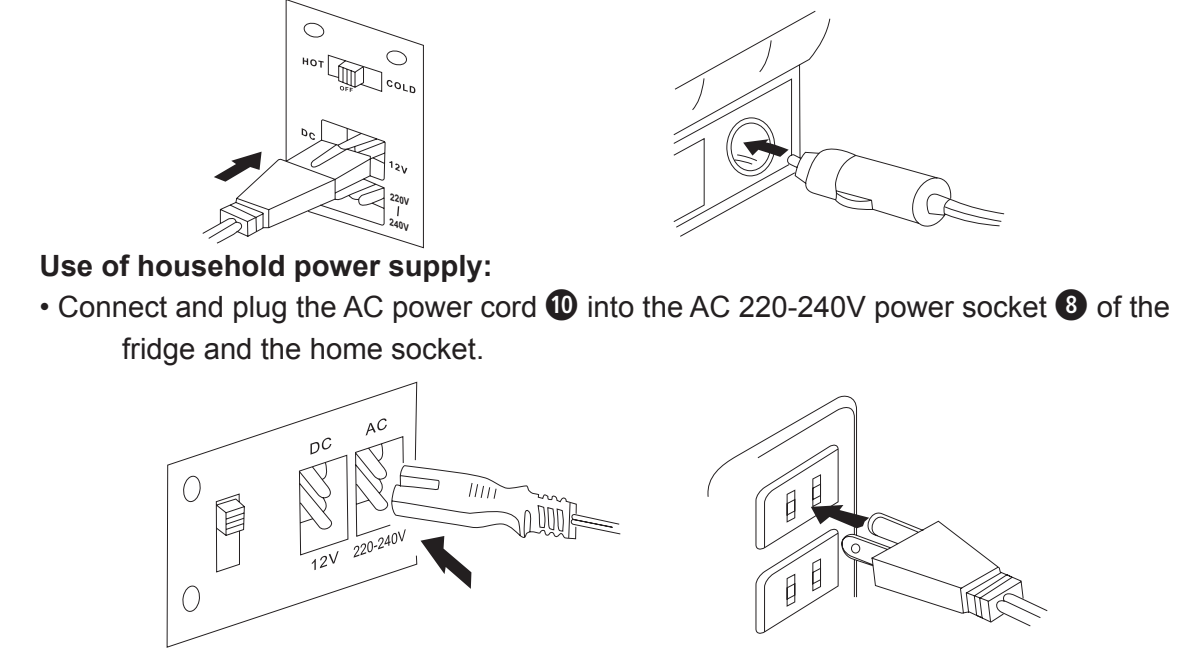

- Turn the cold and hot switch 6 to “COLD” to activate the cooling function. The cooling indicator 4 will light up in green.
- Turn the cold and hot switch 6 to “HOT” to activate the heating function. The heating indicator 5 will light up in red.
- **LED light function:**
 - Touch the LED light button 2 to light up LED makeup mirror.
 - Tap again to adjust the light brightness:
 - 1st tap: strong light
 - 2nd tap: medium light
 - 3rd tap: low light
 - 4th tap: turn off the light

Target temperature

- The temperature inside the fridge will not immediately reach the target when it first starts. Typically, it takes about 2 hours to achieve the desired temperature.
- The minimum temperature of the fridge may vary based on the room temperature. When the room temperature is 25°C, the fridge can cool down to approximately 5-10°C or hot to 40-50°C.
- When switching between hot and cold, first set the cold and hot switch 6 to “OFF” in the middle to stop the cooling or heating function, and wait at least 15 minutes before switching to either cooling or heating mode. If you do not stop and switch directly, the refrigeration system of the fridge may be damaged due to drastic changes in temperature.
- To keep the contents in the fridge fresh, please avoid opening the door frequently and do not leave it open for extended periods.
- When using the heating function, the interior of the fridge will become hot. Please be cautious of hot surfaces when opening the front door to retrieve a tin can for warm beverages (such as coffee). Keep in mind that the cans or other items stored may be hot.
- For the cooling function, it is recommended to use it in a room temperature of 25°C or below.

Maintenance and cleaning

- Turn off and unplug the unit before cleaning.
- If there is frosting, unplug the power cord from the AC or DC outlet and then remove all items from the fridge. Open the door and allow the frost to melt, then wipe it down with a towel.
- **IMPORTANT:** Do not spray with liquids or submerge in water.
- Avoid using flammable liquids, chemicals, abrasive creams, steel wool, or scouring pads.
- Wipe with a damp cloth using lukewarm water and mild detergent.
- Wipe again to remove detergent residue and dry thoroughly before use.
- Keep the switch and power inlet socket dry. Ensure the socket is dry before plugging in.
- If vents are dusty, use a vacuum cleaner with a non-rotating brush attachment to clean.

Troubleshooting

If the fridge is not powering on, please take the following steps:

- Ensure that the power cord is properly connected to the power socket.
- Verify that the cold and hot switch 6 is turned on.
- Check that the AC/DC power cord is connected correctly.
- Inspect the cigarette lighter to make sure it is functioning, and check for any improper connections or contamination when using the car power supply with the DC power cord.
- Clean the cigarette lighter base with a non-metallic brush if necessary when using the car power supply with the DC power cord.

Disposal

This product must not be disposed of together with domestic waste. All users are obliged to hand in all electrical or electronic devices, regardless of whether or not they contain toxic substances, at a municipal or commercial collection point so that they can be disposed of in an environmentally acceptable manner. Consult your local authority or your supplier for information about disposal.

Technical specifications

Name and model:	medisana Beauty Fridge with LED Mirror SF 100
Temperature range (at 25°C ambient):	Cooling: 5-10°C; Heating: 40-50°C
Rated voltage (AC):	220-240V~50-60Hz
Rated power (AC):	Cooling: 43W; Heating: 36W
Rated voltage (DC):	12V
Rated power (DC):	Cooling:48W; Heating: 41W
Noise level:	40 dB
Capacity:	6L
Dimensions:	19 x 27.4 x 32.4 cm
Weight:	2.35 kg
Article No.:	50116
EAN No.:	4897138 50116 7

In accordance with our policy of continual product improvement, we reserve the right for technical and design changes without notice.

The current version of these instructions for use can be found at www.medisana.asia

Warranty and repair terms

Please contact your dealer or the service centre in case of a claim under the warranty. If you have to return the unit, please enclose a copy of your receipt and state what the defect is. The following warranty terms apply:

1. The warranty period for **medisana** products is one year from date of purchase. In case of a warranty claim, the date of purchase has to be proven by means of the sales receipt or invoice.
2. Defects in material or workmanship will be removed free of charge within the warranty period.
3. Repairs under warranty do not extend the warranty period either for the unit or for the replacement parts.
4. The following is excluded under the warranty:
 - a. All damage which has arisen due to improper treatment, e.g. non-observance of the user instructions.
 - b. All damage which is due to repairs or tampering by the customer or unauthorised third parties.
 - c. Damage which has arisen during transport from the manufacturer to the consumer or during transport to the service centre.
 - d. Accessories which are subject to normal wear and tear.
5. Liability for direct or indirect consequential losses caused by the unit are excluded even if the damage to the unit is accepted as a warranty claim.

medisana.

Unit E&F, 31/F, YHC Tower, 1 Sheung Yuet Road, Kowloon Bay, Kowloon, Hong Kong